

Instructions for maintenance

In addition to the manufacturer-related service instructions, we strongly advise the operator/owner to consider the corresponding prescriptions of the European Standard EN1176-7.



Standard swing 040233000 KAROLAM® (2,00)

One-time maintenance



Check all screw connections; retighten, if necessary. Cover the screws with protective screw caps.

once,
approx. 4-5 weeks after installation

Recommended regular inspection and maintenance		once a week	twice per month	once a month	four times a year	twice a year	once a year
	Check cleanliness of playing and safety area. Remove any foreign object						
	Check chain suspensions for wear, replace if necessary. The nominal chain thickness must not diminish more than 30% (< 4,5mm). Beyond that limit, a chain replacement is indispensable. Please note that the grub screw inside the chain adapter has to be fully tightened by means of an Allen key or a socket wrench without overwinding the screw socket.						
	Check rubber parts like seats, hoses, flaps, collars for wear, replace if necessary						
	In case of drying cracks, remove splinters of wood and chamfer sharp edges						
	Check tightness of stand construction: stability of (vertical) posts or supports, retighten screw connections, if necessary.						
	Check further structural components for wear and tightness; retighten, if necessary and replace defective parts.						
	Check bearings and/or joints for tight fixing and easy-running function, replace or grease, if necessary.						
	Check tightness/stability of the connection between stainless steel support and laminated timber post, replace post, if necessary.						
	Check foundations and structural construction for corrosion or decay, repair or replace if necessary						

Please note: The above-mentioned maintenance intervals only have recommendatory character. They must necessarily be adapted to the local circumstances of each playground (frequency of use, social setting, risk and frequency of vandalism etc.).