

Instructions for maintenance

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7



K&K
Water
dispenser
without flange
0-33119-003 pipe



Check all screw connections; if necessary screw down again.

one-time only approx. 4-5 weeks after installation

Recommendations about regular maintenance		1 x weekly	2 x monthly	1 x monthly	4 x yearly	2 x yearly	1 x yearly
<input checked="" type="checkbox"/>	Remove the dispenser <u>before the winter period</u> and store. Reassemble dispenser <u>after the winter period</u> (see installation instructions)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/>	Check cleanliness of play- and safety area, take out alien elements	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input checked="" type="checkbox"/>	Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input checked="" type="checkbox"/>	Check foundation, foundation anchoring and whole construction for corrosion or decay, repair or replace if necessary.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/>	Check if the Piezo push-button is in working order, if necessary change battery (see installation instruction)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Frost protection Due to danger of frost damage water dispenser definitely needs to be dismantled and stored. A winter plate made of stainless steel to protect the remaining opening in the ground, incl. bolts, is part of the delivery. A safe operation of the equipment is possible only up to a temperature of + 5° Celsius, lower temperatures inevitably redound to the destruction of the pipe-break valve. Simple draining is not sufficient! If this is disregarded or replaced by other

means K&K will take no responsibility or guarantee for any damages caused by frost.

For Battery installation / replacement please view present Installation instructions

**Please request our detailed information for your planning by phone
+49(0)4254-93150**

Please note: The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)