## Instructions for maintenance

In addition to the manufacturer-related service instructions, we strongly advise the operator/owner to consider the corresponding prescriptions of the European Standard EN1176-7.

Recommended regular inspection and maintenance	once a week	twice per month	once a month	four times a year	twice a year	once a year
Where appropriate, clean playing sand						
Check cleanliness of playing and safety area. Remove any foreign object						
Check chain suspensions for wear, replace if necessary. The nominal chain thickness must not diminish more than 30% (< 5 mm). Beyond that limit, a chain replacement is indispensable. It might be necessary to warm the U-shaped chain bolt for grub screw dismantling (fitting lubricant).						
Please note that the grub screw inside the chain adapter has to be fully tightened by means of an Allen key or a socket wrench without overwinding the screw socket.						
Check rubber parts like seats, hoses, flaps, collars for wear, replace if necessary.						
Where appropriate, check synthetic surfacing material for damages or severe wear, repair or replace, if necessary.						
Check tightness of stand construction: stability of (vertical) posts or supports, retighten screw connections, if necessary.						
Check further structural components for wear and tightness; retighten, if necessary and replace defective parts.						
Check bearings and/or joints for tight fixing and easy-running function, replace or grease, if necessary.						
Check foundations and structural construction for corrosion or decay, repair or replace if necessary						

Please note: The above-mentioned maintenance intervals only have recommendatory character. They must necessarily be adapted to the local circumstances of each playground (frequency of use, social setting, risk and frequency of vandalism etc.).

040556000 Contact swing (2,50)

## One-time maintenance

Check all screw connections; retighten, if necessary.

once, approx. 4-5 weeks after installation



