

# Instructions for maintenance

In addition to the manufacturer-related service instructions, we strongly advise the operator/owner to consider the corresponding prescriptions of the European Standard EN1176-1:2017.



approx. 4-5 weeks after installation

#### 040770001 K&K Viking swing (3,00)

Check all screw connections; retighten, if necessary.

One-time maintenance

	••					
Recommended regular inspection and maintenance	once a week	twice per month	once a month	four times a year	twice a year	once a year
Check cleanliness of playing and safety area. Remove any foreign object						
Check chain suspensions for wear, replace if necessary. The nominal chain thickness must not diminish more than 30% (< 4,5mm). Beyond that limit, a chain replacement is indispensable.						
For the purpose of a chain replacement, please follow the illustrated instructions on the next page.						
Where appropriate, check synthetic surfacing material for damages or severe wear, repair or replace, if necessary						
Check tightness of stand construction: stability of (vertical) posts or supports, retighten screw connections, if necessary.						
Check further structural components for wear and tightness; retighten, if necessary and replace defective parts.						
Check bearings in the chain suspensions for tight fixing and easy-running function, replace or grease, if necessary.						
Check the swinging rope for damages, replace if necessary.						
Check foundations and structural construction for corrosion or decay, repair or replace if necessary						


Please note: The above-mentioned maintenance intervals only have recommendatory character. They must necessarily be adapted to the local circumstances of each playground (frequency of use, social setting, risk and frequency of vandalism etc.).




# Instructions for maintenance

#### Detailed chain suspension disassembly:

- 1. Dismantle grub screw M6x12 (width across flats: 3 mm).
- Draw off the shaft.

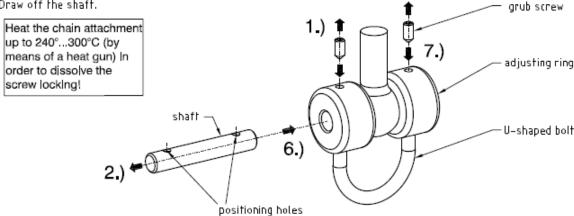

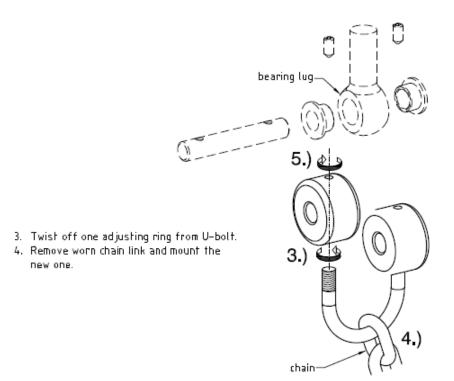

### Detailed reassembly of chain suspension:

- Screw adjusting ring on U-bolt Attention: The tapped holes in the adjusting rings are positioned off-centre; Please see to a minimum gap between adjusting ring and bearing lug.
- 6. Insert shaft into both adjusting rings and bearing lug. Attention; Check the position of the pilot holes!
- 7. Tighten set screws M6x12 (width across flats: 3 mm) with screw locking medium strength.