

## Instructions for maintenance

## 0-60284-000 Picnic table



Check all screw connections; if necessary screw down again. Cover screw-head with protecting cap.	one-time only approx. 4-5 weeks after installation					
Recommendations about regular maintenance	1 x weekly	2 x monthly	1 x monthly	4 x yearly	2 x yearly	1 x yearly
Check tightness of stand construction (stability of vertical posts or supports), retighten screw connections, if necessary						
In case of drying cracks, remove splinters of wood and chamfer sharp edges			$\boxtimes$			

All timber items in this product were treated with a wood preservative which wears over the time, due to use and weather influences. Therefore, we recommend a protection renewal every year up to every two years. Prepare the wooden elements with appropriate abrasive material and apply a new wood preservative (for instance SAICOS Haus & Gartenfarbe - available from us\*). \*Item No: 4910139 (0,75 l) respectively 4910140 (2,50 l)

Please note: The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g.due to the frequency of use, social facilities and vandalism problems etc.)