
## Instructions for maintenance

Kaiser & Kühne
Freizeitgeräte GmbH

In addition to the manufacturer-related service instructions, we strongly advise the operator/owner to consider the corresponding prescriptions of the European Standard EN1176-7.

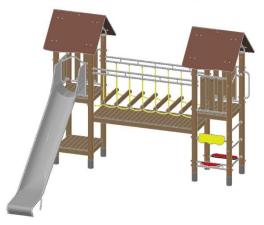

approx. 4-5 weeks after installation

## 022134703 K&K Play structure

heads by protective screw caps.

One-time	maintenance	

Check all screw connections; retighten, if necessary. Cover screw

Recommended regular inspection and maintenance	once a week	twice per month	once a month	four times a year	twice a year	once a year
Where appropriate, clean playing sand						
Check cleanliness of playing and safety area. Remove any foreign object						
Check chains of tottery bridge for wear, replace if necessary. The nominal chain thickness must not diminish more than 30% (< 4,5 mm). Beyond that limit, a chain replacement is indispensable.						
Check cleanliness of sliding surfaces, remove protruding parts, exchange damaged sliding course coverings						
In case of drying cracks, remove splinters of wood and chamfer sharp edges						
Where appropriate, check synthetic surfacing material for damages or severe wear, repair or replace, if necessary						
Check tightness of stand construction: stability of (vertical) posts or supports, retighten screw connections, if necessary.						
Check further structural components for wear and tightness; retighten, if necessary and replace defective parts.						
Check tightness/stability of the connection between stainless steel support and laminated timber post, replace post, if necessary.						
Check foundations and structural construction for corrosion or decay, repair or replace if necessary						

once,

Please note: The above-mentioned maintenance intervals only have recommendatory character. They must necessarily be adapted to the local circumstances of each playground (frequency of use, social setting, risk and frequency of vandalism etc.).