

1. Assign a device location considering the space requirements (impact area).  
Slide direction recommended: north-east or in half-shade of trees.
2. Excavate soil for foundations, according to drawing.  
Please note: To achieve maximum stability and a safe installation, a moderate level of soil solubility is required.
3. Pour in a drain layer of gravel of approx. 10 cm thickness between the bottom of the posts and plain base of foundation.
4. Insert reinforcing steel into the corresponding holes of the posts.
5. Place posts type A according to the corresponding number (see foundation layout) into the respective foundation hole. Play level mark (=aluminium blind rivet) complies with the installation depth. Align every post by means of the play level mark facing into the same direction (see detail or foundation layout).

**6. For installation of the pre-assembled components and/or single parts, the screws slightly have to be lubricated with installation paste!**

Screw together platform and posts by using the middle hole in the mounting brackets.

**Tighten all screws after having aligned all components.**


Install the slide exit with an inclination of 5° in sliding direction so that rain water can drain off.

Screw connections see details in attached list.

7. Grout foundations with compressed concrete C20/25, chamfer and round off the edges, cover the foundations with a surface which meets the requirements for impact attenuation so that the critical fall height of the surfacing is equal to, or greater than, the free height of fall of the equipment (acc. to EN 1176-1). The run-out section fall zone must have surfacing with a critical fall height of at least 1000mm (acc. to EN 1176-3).
8. Release for play after concrete foundations have set.
9. According to maintenance instructions, check all screw connections after 4-5 weeks and retighten, if necessary.

Please ensure that all special tools supplied (e.g. Allen key for secured Allen screws etc.) and all specific documents which are or may be useful for safety management acc. to EN 1176-7 (e.g. invoice, delivery note, order acknowledgement, installation instructions, maintenance instructions) are forwarded to the persons responsible.

**Necessarily insert all attachment parts before tightening the screws. It is NOT possible to insert them afterwards.**

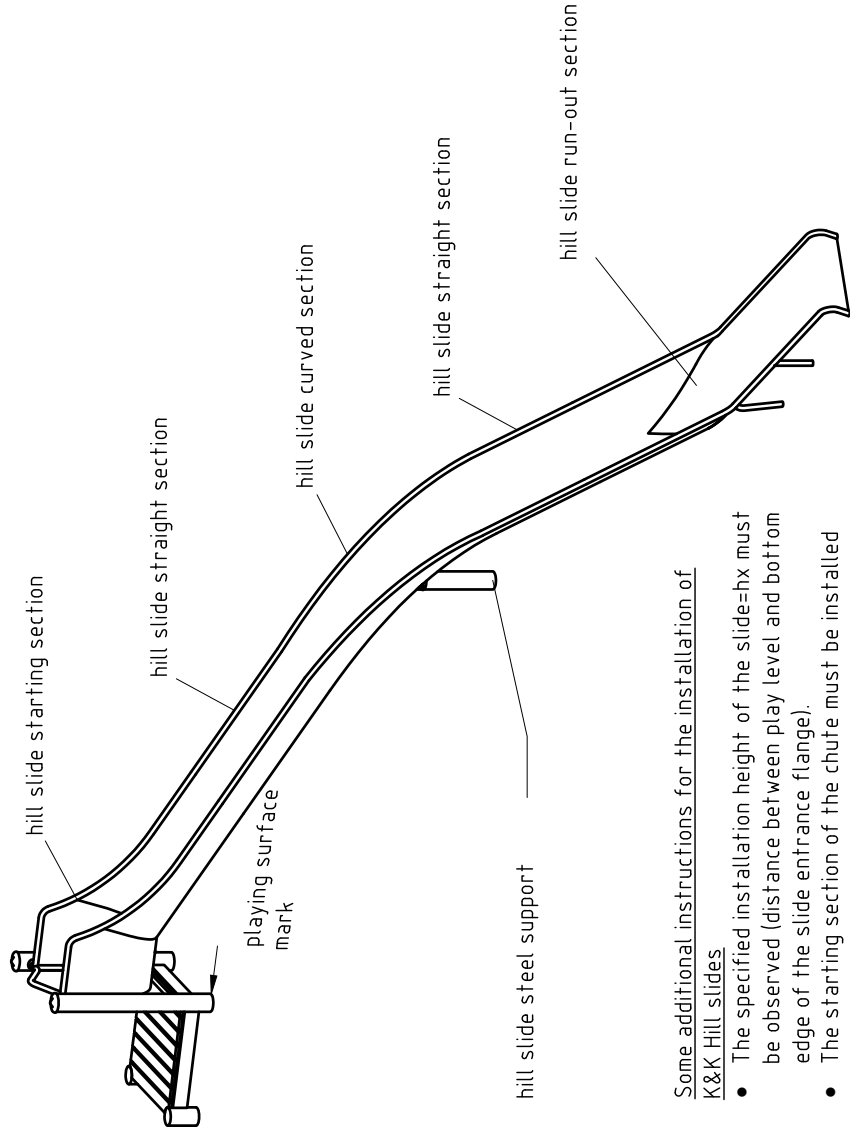

Some additional instructions for the installation of K&K Hill slides

- The specified installation height of the slide=hx must be observed (distance between play level and bottom edge of the slide entrance flange).
- The starting section of the chute must be installed horizontally.
- All (straight, curved or waved sections) of the slide assembly must be installed with the correct inclination (measured in the centre of the slide trough). This does not apply to the hill slide run-out section.
- The hill slide support has to be installed such that it effectively supports the slide, that the curved sections are properly positioned without a deviation from the inclination specified .
- The hill slide run-out section must be installed with an inclination of 5°.

Installation

Item-No.  
0-41870-501

Description  
K&K Hill slide (3,00)  
with platform (0,20)

Scale  
1:50

Date  
10/19 EB



Page  
3/5

**Note: Due to the slide construction, the course of the hill must be shaped such that the fall height will not exceed 2m.**


\* max. free height of fall at slide entrance. Depending on the site profile, the free fall height (hx) and the size of the impact area result from the vertical distance between the bottom of the chute and ground level.

The surfacing material for the impact area within the sliding section must meet the requirements given in table 4 (see EN 1176-1). The shock-absorbing characteristics of any other material to be chosen must be certified in accordance with EN 1177.


The run-out section fall zone must have surfacing with a critical fall height of at least 1000mm (acc. to EN 1176-3).



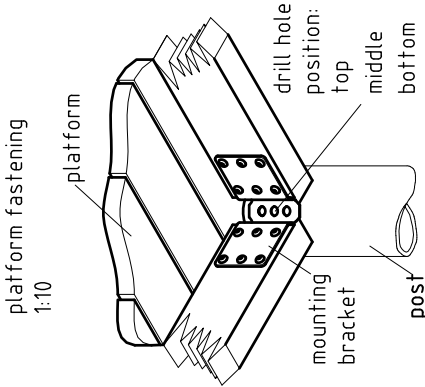
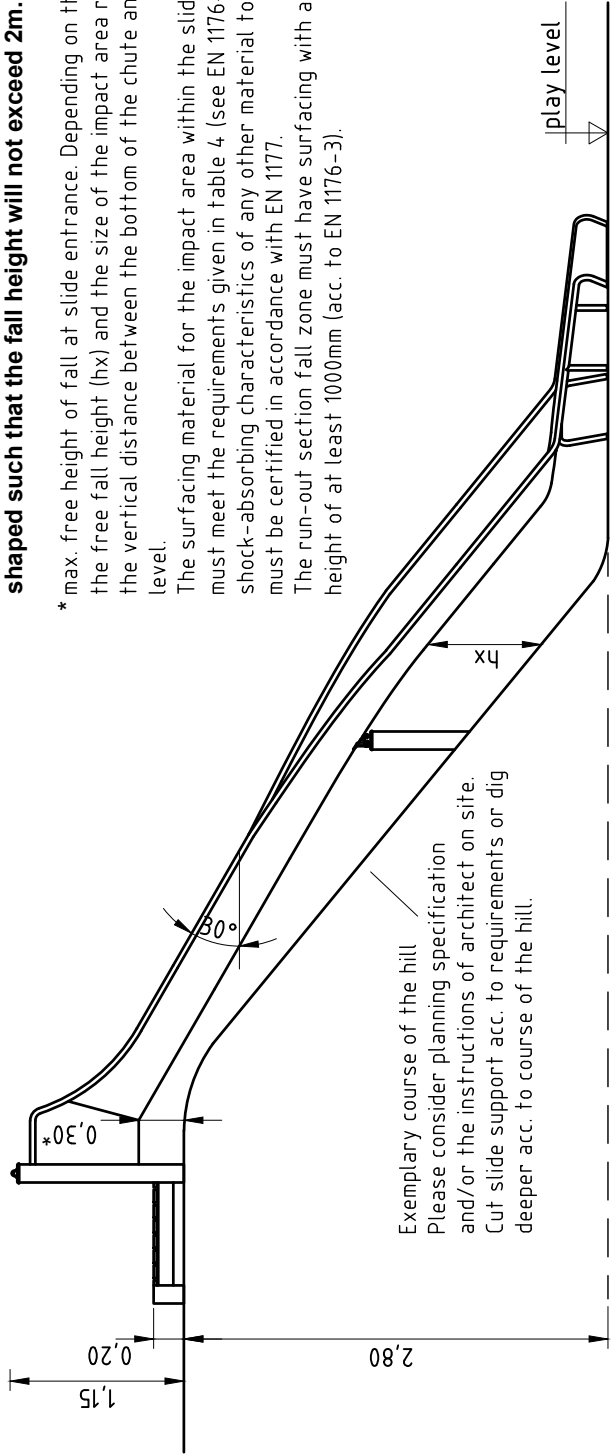


detail of play level mark  
1:5

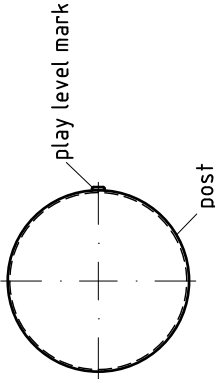


platform orientation  
1:100

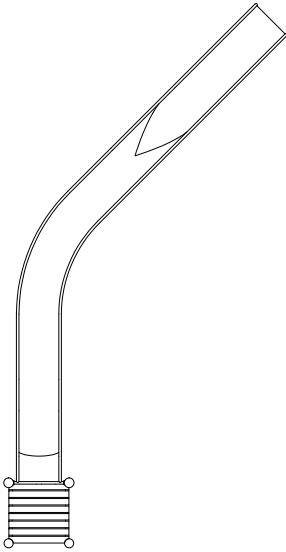

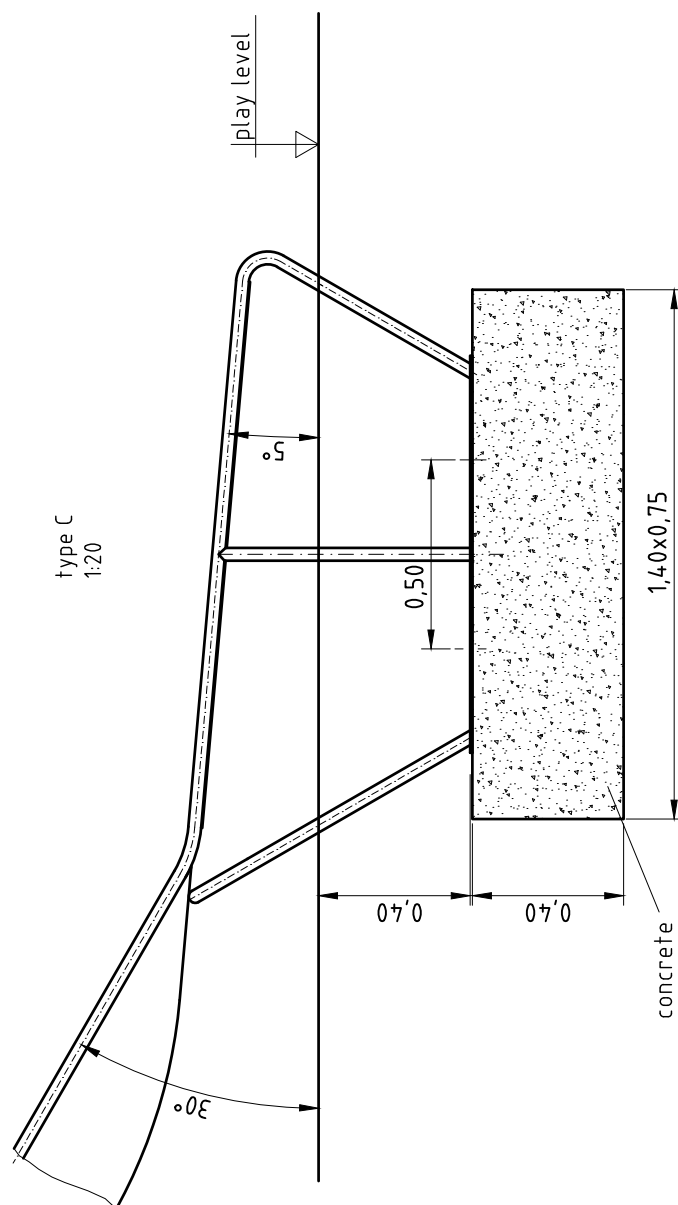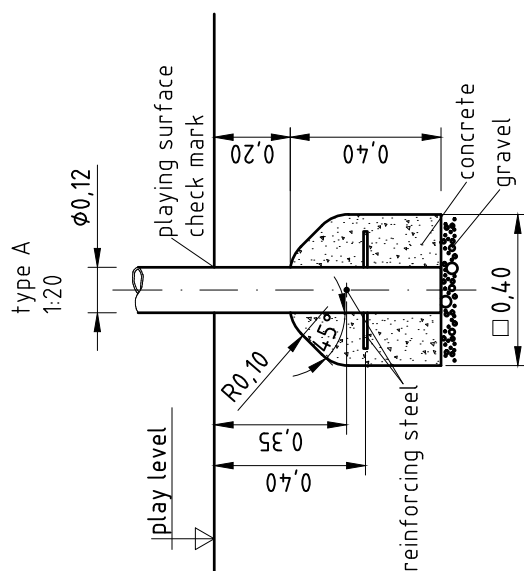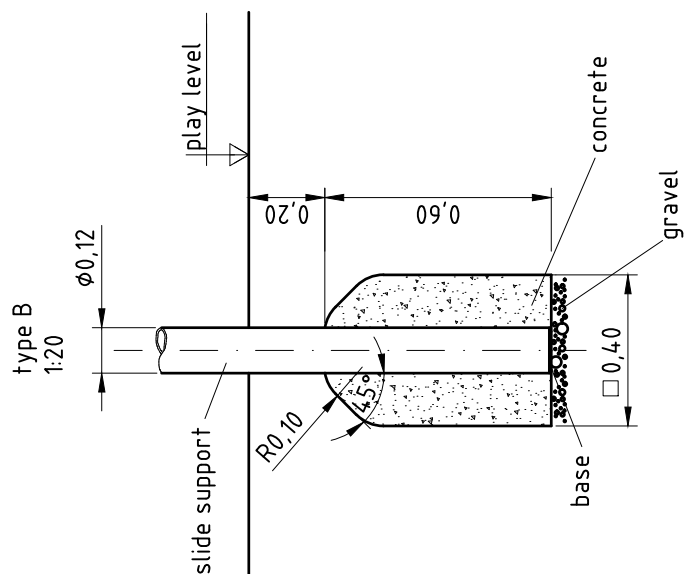


## Plug-in base for slide support

to be mounted as follows:  
 If necessary, shorten stainless steel post  
 of slide support to the required length  
 (with adequate appliance e.g. angle  
 grinder). Insert base from below into the  
 stainless steel post.

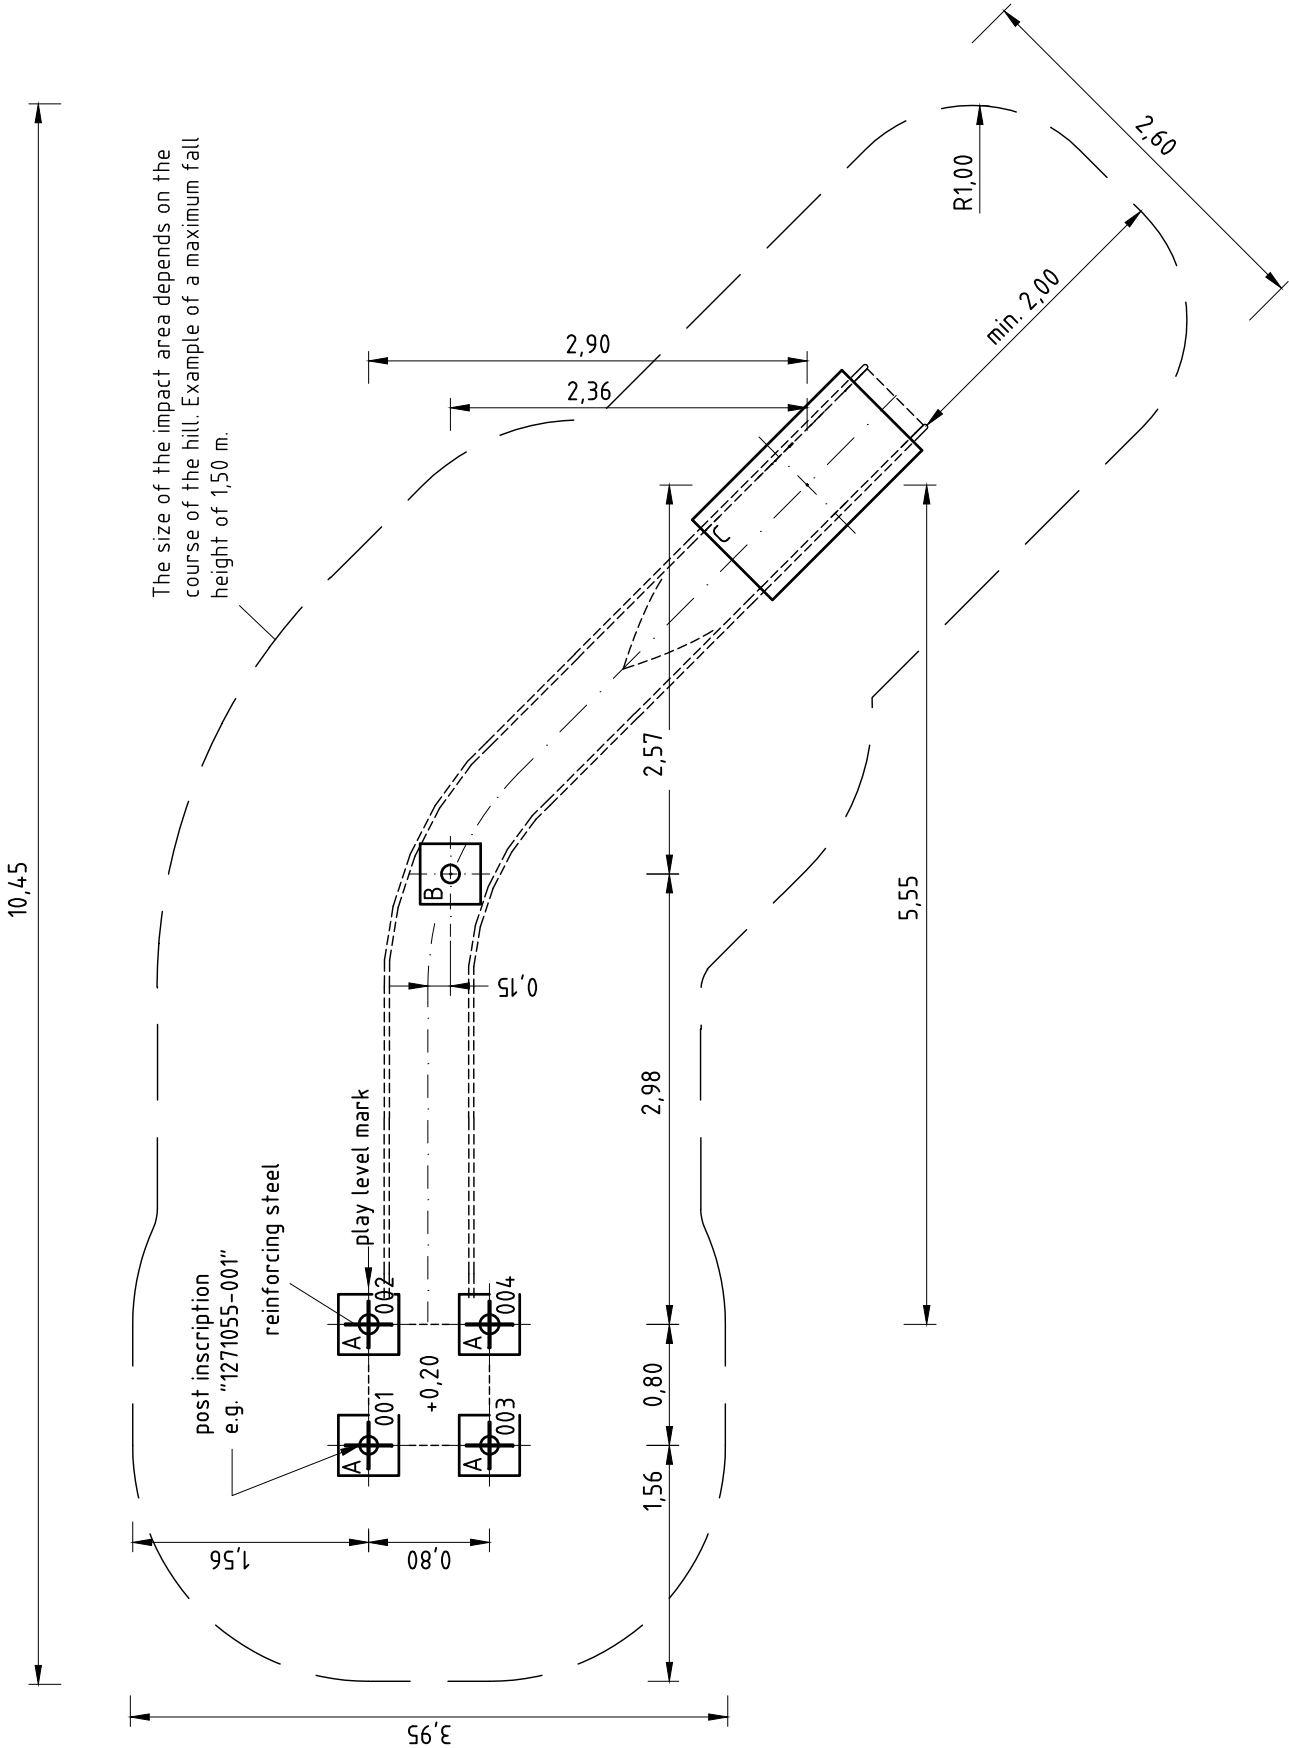


# Installation

Item-No.	Description	Scale	Date	Page
0-41870-501	K&K Hill slide (3,00) with platform (0,20)	1:50	11/24 ST	5/5

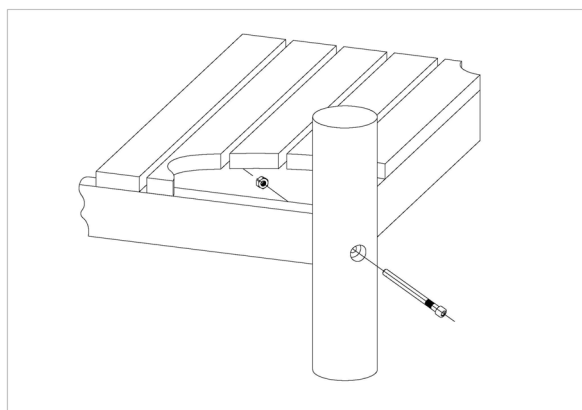


**4 x SFES1200001 Platform fastening to stainless steel post, nut on the side of the platform**

per set	total	item no.	material short text
1	4	3430021	Lock nut M12 DIN985 A2
1	4	2030651	Cheese head screw with pin M12 x 125

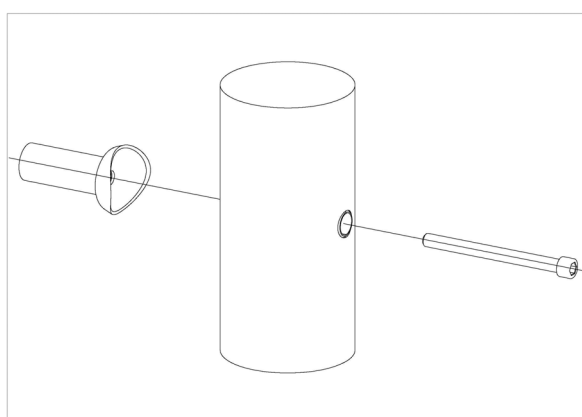


**4 x SFES1210001 Standard bolting of attachment parts (except platforms) to stainless steel posts**

per set	total	item no.	material short text
1	4	2030168	Cheese head screw with pin M12x140

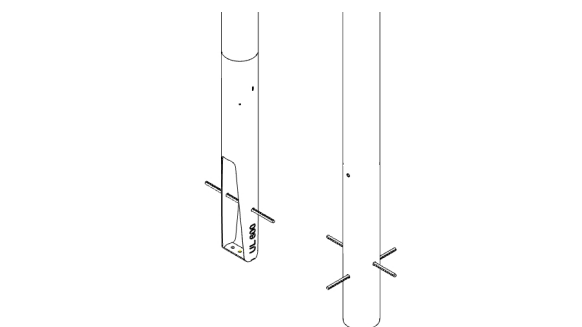


**4 x SFAS1270001 reinforcing steel bar for posts**

per set	total	item no.	material short text
1	4	2130000	reinforcing steel Ø 10 x 310 DIN 488

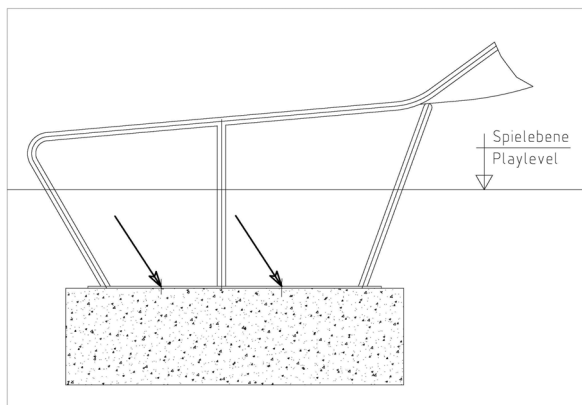

**4 x SFXS1070008 Slide run-out section (midi) stone bolt assembly**

per set	total	item no.	material short text
1	4	1070365	Set of stone bolts for slide run-out section

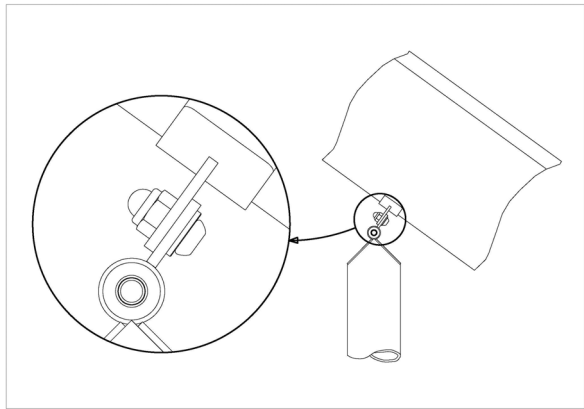

2 x SFAS1070004 Slide support post below hill slide

per set	total	item no.	material short text
1	2	3400622	Dome head security bolt M12x25 PinHexagon A2
1	2	3430025	washer Ø 13 DIN125 A2

1 x SFWZ0000005 Allen key security hex socket AF8

per set	total	item no.	material short text
1	1	3490057	Allen key security hex socket AF8



1 x SFWZ0000009 Hexagon insert socket driver 10mm 1/2"  
with borehole for Pin

per set	total	item no.	material short text
1	1	2030170	Hexagon insert socket driver 10 mm 1/2"



1 x SFWZ0000014 Lubricating metal, bag (4 g)

per set	total	item no.	material short text
1	1	5300024	Metaflux fitting lubricant 2x4 g

